



MODE	BLANKET GAS		PURGE/PRIME		VENT*		ODORANT DRIP		PURGE GAS		ODORANT IN		TRANSFER PUMP		INJECTION PUMP		COMMENTS
	V1	V2	V3	V8	V16	V17	TP	IP									
NORMAL	O	X	X	O	X	O	O/X	O									
PURGE	X ¹	O ²	X	X	O ² /X ³	X ³	X	X									PURGE UNTIL BUBBLING IS HEARD IN BULK TANK
VENT	X	O	X	X	X	X	X	X									CLOSE VALVE WHEN PRESSURE IS 0
PRIME TRANSFER PUMP	X	O	X	X	X	O	X	X									WAIT UNTIL PRESSURE STABILIZES
FILL VEROMETER	O ¹	O	X	X	X	O	O ² /X ³	X									USE "FILL" BUTTON TO FILL VEROMETER
PRIME INJECTION PUMP	O	O	X	X	X	X ¹	X	O ²									START PUMP, STOP AFTER 5 SECONDS, REPEAT 3X
NORMAL	O	X ¹	X	O ²	X	O ²	O/X	O									CONFIRM FIRST FILL

- X DENOTES VALVE CLOSED OR PUMP OFF
 - O DENOTES VALVE OPEN OR PUMP ON
 - YELLOW HIGHLIGHT INDICATES VALVE POSITION WILL CHANGE FROM PREVIOUS STEP
 - SUPERSCRIPT INDICATES THE ORDER THAT THE VALVES SHOULD BE CHANGED
 * CAUTION: VENT VALVE (V5) MUST REMAIN CLOSED DURING ALL OPERATIONS EXCEPT VENTING